



Bluetooth Quick Start Guide

1. Install ProScan Software


Insert the ProScan CD into your PC's CD-ROM drive. Installation should begin automatically. If installation does not begin, click **Start** → **Run**, and type "D:\setup.exe" (where D is the drive letter of your CD-ROM drive), and click OK.

ProScan requires that your PC have the Microsoft .NET Framework installed. If your PC doesn't have the latest version of the .NET Framework installed, you should elect to install the .NET Framework when prompted to do so.

Follow the on-screen instructions to complete installation.

2. Connect Interface to Vehicle's DLC

The 16-pin diagnostic link connector (DLC) should be located under the dashboard within 3-feet of the steering column. Connect the OBD-II cable from the DLC to the interface module. The Power LED on the interface module should light up.

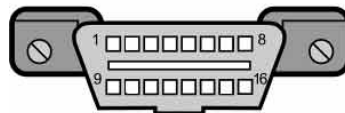

3. Install USB to Bluetooth Adapter

Follow the installation instructions on the reverse side for the USB to Bluetooth adapter.

4. Launch the ProScan Software

Run ProScan by selecting it from the Start menu or by using the desktop icon. Clicking the Connect button will attempt to establish a connection with the vehicle.

5. Read the User's Manual

Before attempting to use ProScan you should read the user's manual. The user's manual can be accessed from within ProScan via the Help menu, or it can be browsed from our web site.

6. Contacting Technical Support

If you have unanswered questions, try checking our frequently updated list of Frequently Asked Questions. Just click the FAQ link on our web site.

We also host a user forum where the answer to your question may have already been answered by a staff member or other user.

Support Forum: <http://www.myscantool.com/forum>
Support Site: <http://www.myscantool.com/support>

Visit our web site frequently for important news and software upgrades!

<http://www.MyScanTool.com>

Installing the USB to Bluetooth Adapter

1. Plug in the Adapter

Plug the USB to Bluetooth adapter into any available USB port on your computer. Windows will automatically install the correct drivers.


2. Set up the Bluetooth Connection

Double-click the “Bluetooth Devices” icon located in the system tray.



If the icon doesn't appear, try removing and re-inserting the USB to Bluetooth adapter.

The Bluetooth Devices window will appear:

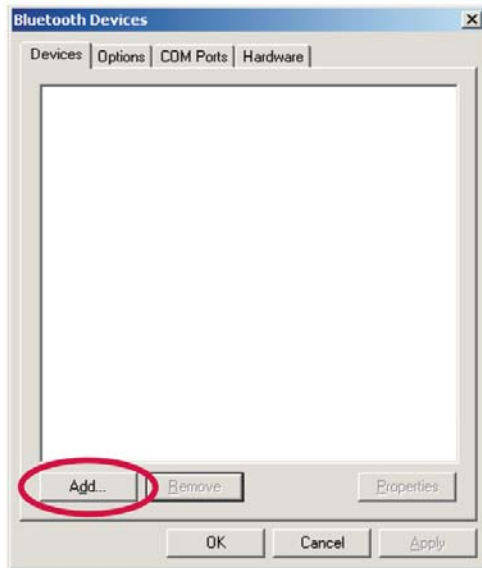

Click the “Add...” button.

The “Add Bluetooth Device Wizard” will appear:




Check the “My device is set up and ready to be found” checkbox. Then click the “Next >” button.

The wizard will search for and display Bluetooth devices within range:




Select “ScanTool.net-XXXX”, then click the “Next >” button to proceed.

You'll be asked to enter a passkey:

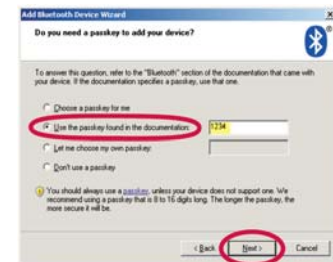


Select the “Use the passkey found in the documentation” radio button. Enter “1234” in the text box, then click the “Next >” button.

The wizard will connect to the scan tool and exchange passkeys:

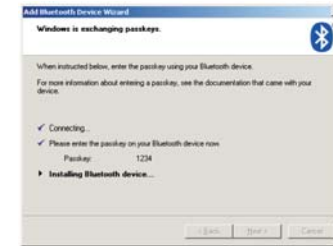

Once the passkeys are exchanged, the wizard will display the COM ports being used by the adapter:

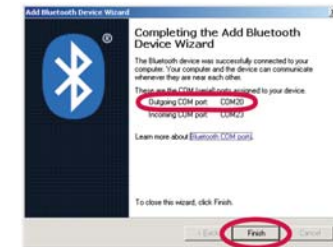

Write down the outgoing COM port setting!
You will need to specify this port number under the ProScan software's communication settings.

Click the “Finish” button.

The wizard will close and you should see the device listed under the “Devices” tab.



Click the “OK” button to end the setup process.